


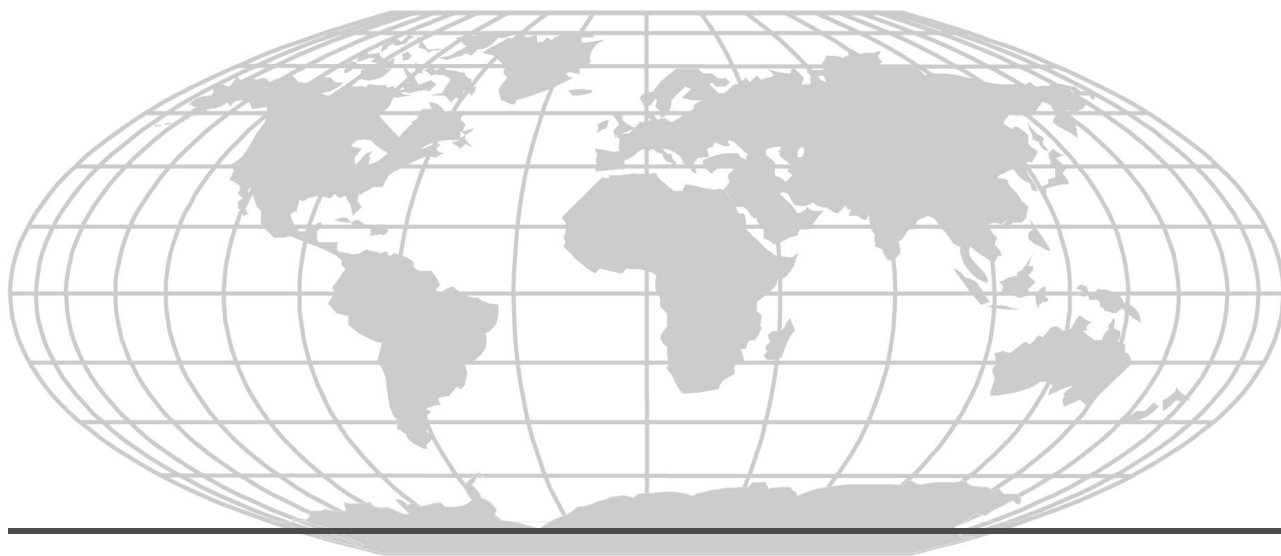

**Supplement to the SLC Wiring Manual
51253 Revision G
dated 11/29/2005**



Document 51253SUP
01/12/2006 Rev:

H

P/N 51253SUP:H

ECN 05-662

Documentation Feedback

Your feedback helps us keep our documentation up-to-date and accurate. If you have any comments or suggestions about our online Help or printed manuals, you can email us.

Please include the following information:

- Product name and version number (if applicable)
- Printed manual or online Help
- Topic Title (for online Help)
- Page number (for printed manual)
- Brief description of content you think should be improved or corrected
- Your suggestion for how to correct/improve documentation

Send email messages to:

FireSystems.TechPubs@honeywell.com

Please note this email address is for documentation feedback only. If you have any technical issues, please contact Technical Services.

1 System Introduction

1.1 Related Documents

Add to Section 1.3, “Reference Documentation”, on page 10–11:

NBG-12LXSP Spanish-/English-Labeled Addressable Manual Pull Station	I56-2769 (English) I56-2797 (Spanish)
NBG-12LXP Portuguese-Labeled Addressable Manual Pull Station	I56-2272

1.2 Devices

Add to Section 1.6.8, “Addressable Manual Pull Stations”, on page 14:

The **NBG-12LXSP** is a Spanish/English labeled version; **NBG-12LXP** is a Portuguese-labeled version. Both support FlashScan or CLIP mode.

2 Wiring an Addressable Manual Pull Station

Add to Section 10.1, “Description”, on page 57:

The **NBG-12LXSP** is a Spanish/English labeled version; **NBG-12LXP** is a Portuguese-labeled version. Both support FlashScan or CLIP mode. Wiring is the same as for the NBG-12LX Manual Pull Station.